


# SUPREME

## REPLACEMENT DE LA CARTE DE CONTRÔLE


ATTENTION : RISQUE DE DOMMAGE À DES COMPOSANTES ÉLECTRIQUE. TOUCHER UNE SURFACE MISE À LA TERRE AVANT DE MANIPULER LA CARTE DE CONTRÔLE

### SUPREME MODULANTE


1. Couper toutes les alimentations électriques
2. Retirer les 4 vis retenant le support de carte de contrôle puis les 7 vis du support de composants

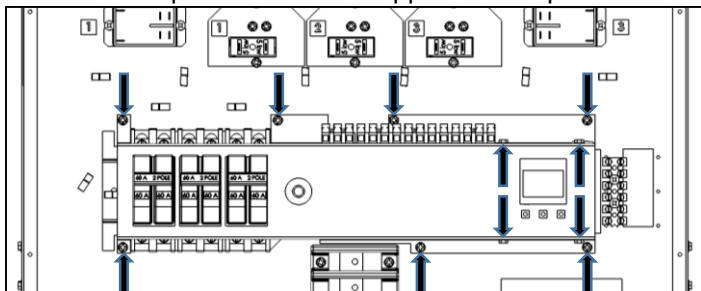

3. Déconnecter tous les fils reliés à la carte de contrôle

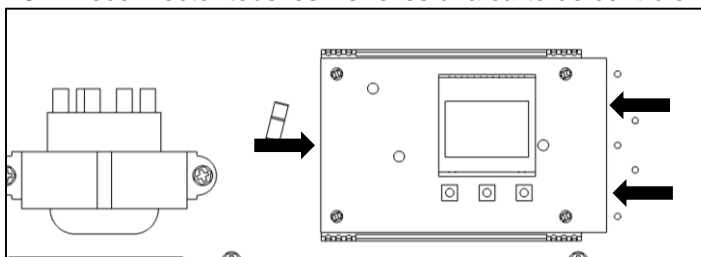


4. Reconnecter les fils à la nouvelle carte
5. Réinstaller le support de composants et le support de carte de contrôle à l'aide des 11 vis retirés à l'étape 2
6. Alimenter l'appareil
7. L'écran affichera

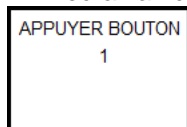

8. Appuyer sur le bouton bas (Si le délai est trop long pour le test des trois boutons il faudra recommencer à l'étape 7)




9. L'écran affichera

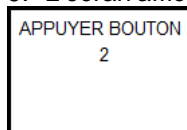

10. Appuyer sur le bouton du centre




11. L'écran affichera

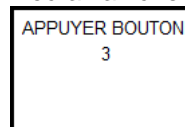

12. Appuyer sur le bouton haut



13. Utilisez les flèches haut et bas afin de sélectionner le modèle et appuyez ensuite sur le bouton central afin de valider la sélection

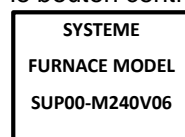


14. Le menu « SYSTÈME » s'affichera. Votre nouveau contrôleur est maintenant configuré

**Note : Si le mauvais modèle a été sélectionné, il est possible de le changer en allant dans le menu « Installateur » -> « Système » -> « Modèle four. »**

### SUPREME CONFORT/AVANTAGE

1. Couper toutes les alimentations électriques, le thermostat doit être fermé ou déconnecté
2. Afin de retirer la carte des supports de plastique, utiliser une paire de pince à long nez et pincer délicatement le bout des supports. Répéter pour les quatre supports

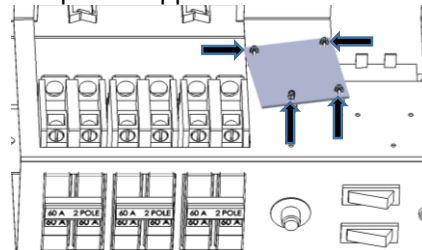

3. Déconnecter la carte de contrôle défectueuse
4. Reconnecter la nouvelle carte de contrôle
5. Placer la carte de contrôle dans les supports de plastique
6. Alimenter l'appareil


# SUPREME

## CONTROL BOARD REPLACEMENT


**ATTENTION: RISK OF DAMAGE TO THE ELECTRONIC COMPONENTS OF THE CONTROL BOARD. TOUCH A GROUNDED SURFACE BEFORE MANIPULATING THE CONTROL BOARD**

### SUPREME MODULATING


1. Disconnect all electrical supplies
2. Remove the 4 screws holding the control board bracket then the 7 screws holding the components bracket

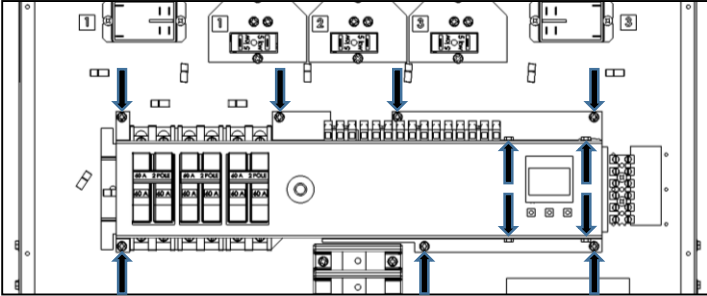

3. Disconnect all the wires connected to the control board

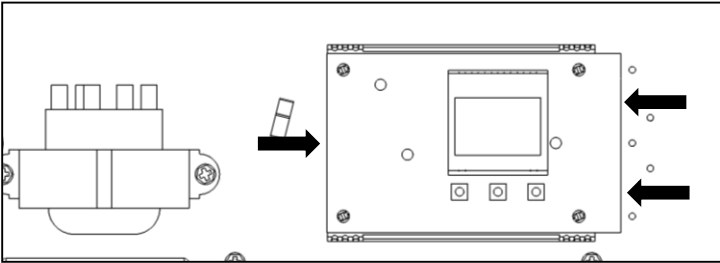


4. Reconnect the wires to the new control board
5. Reinstall the component bracket and the control board bracket using the 11 screws removed on step 2
6. Power the unit
7. The screen will display

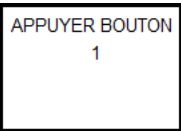

8. Press the DOWN button (If the time for pressing the three buttons is too long the controller will go back to step 7)




9. The screen will display

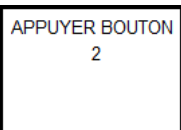

10. Press the center button




11. The screen will display

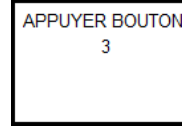

12. Press the UP button



13. Use the UP and DOWN arrows in order to select the model of the unit, then press the center button to confirm your choice

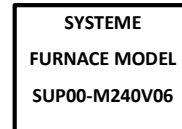


14. The "SYSTEM" menu will appear. Your new controller is now configured

**Note: if the wrong furnace model was selected, it is possible to modify it by going to "Installer" -> "System" -> "Furnace Model"**

### SUPREME COMFORT/ADVANTAGE

1. Disconnect all electrical supplies
2. In order to remove the controller, use long nose pliers and gently pinch the end of the plastic standoffs. Repeat for all four standoffs

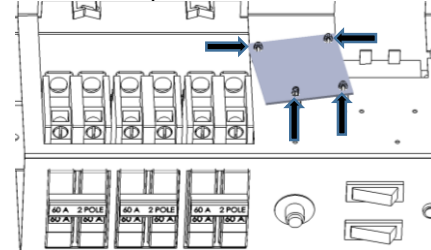

3. Disconnect the defective control board
4. Reconnect the new control board
5. Place the board on the plastic standoffs
6. Power the unit